 



TVB2005 Quick Start

Please read the user manual of this product carefully. We wish you a pleasant experience!

Button Functions

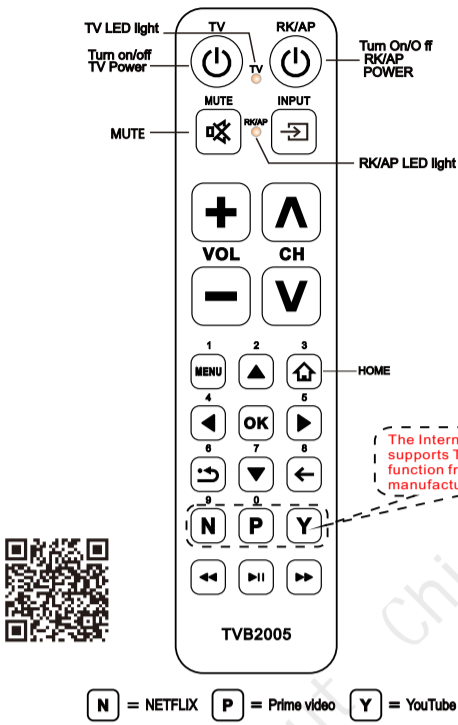

 Battery installation

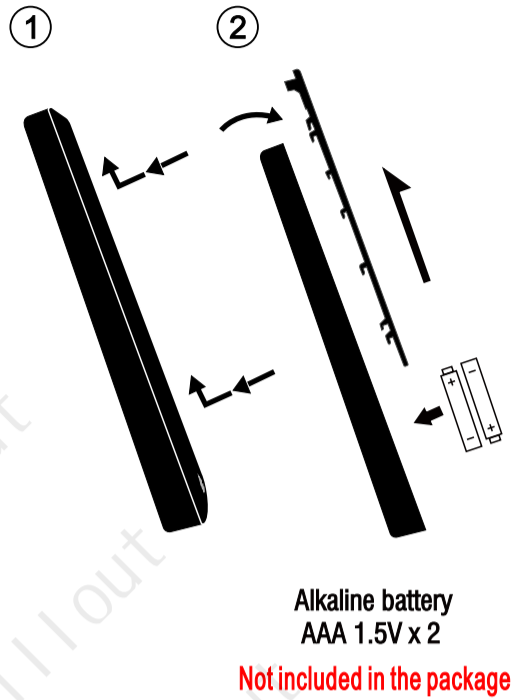

Important Notice:



The red light will turn on when you press a button, indicating the remote is in TV mode. To control your TV or enter a setup code, ensure the remote is set to this mode first.



The green light will turn on when you press the button, indicating the remote is in RK/AP mode. To control your Apple Box/Roku Box or enter a setup code in SAT/Cable TV mode, ensure the remote is set to this mode first.



A Program remote to your TV :

1. Press and TV together for 2 seconds. The TV red light will flash 3 times, the mode is now set.



2. You have two options to set up to your TV.
Method1: If your TV brand is listed in the table below, use the shortcut.
Method2: If not, use code.

2-1) How to Switch Brands:

Press and hold the OK button + the Switching button for your brand (see table below) at the same time until the LED flash and turn off, about 3s.

Observe the LED:

- **Briefly lights up** (initial recognition)
- After 3 seconds: **Starts blinking**
- When **LED turns off**: Release the buttons

Brand Switching Buttons:

Brand	SetupKeyCombination
SAMSUNG	OK +
LG	OK +
SONY	OK + VOL+
VIZIO	OK + VOL-
SHARP	OK + CH^
TOSHIBA	OK + CHv
ROKU TV	OK + MENU
PANASONIC	OK +
HISENSE-1	OK +
HISENSE-2	OK +
TCL	OK +
PHILIPS	OK +
FIRE TV	OK +
INSIGNIA	OK +
RCA	OK + N
JVC	OK + P
WESTINGHOUSE	OK + Y
SANYO	OK +
PHILIPS-2	OK +
HISENSE-3	OK +
DEVICE	SetupKeyCombination
ROKU BOX	RK/AP +
APPLE BOX	RK/AP +

2-2) How to Set Up Manually

1. In the **Code List** included with the remote, find the first "3-digit code" corresponding to your device type and brand.
2. Press and hold the **OK** button, then press the **TV Power** button simultaneously for 3 seconds until the device's LED light stays on.
3. Enter the first 3-digit code found in Step 1. The LED light will turn off (if an invalid code is entered, the LED light will flash 3 times and exit code entry automatically).
4. Point the remote at the device and test the buttons. If the buttons do not work as expected, use the next code for your device and repeat Steps 2-4 until you find the compatible device code.




B Program remote to your Apple Box/Roku Box:


1. First, connect your player (Apple box or Roku box) to your TV. Turn on the TV, within 10 seconds after the TV is powered on, the player will automatically turn on the power of the box.
2. Press **▲** and RK/AP **⏻** together for 2 seconds. The RK/AP green light will flash 3 times, the mode is now set.



- 2-1). For the Apple Box remote control, **if you find the buttons are not responsive**, please press **▶** and RK/AP **⏻** together for 3 seconds and then release them. Please try the remote control again.

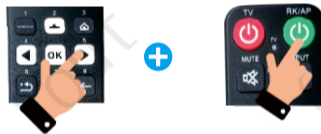

- 2-2). For the Roku Box remote control, **if you find the buttons are not responsive**, please press **◀** and RK/AP **⏻** together for 3 seconds and then release them. Please try the remote control again.

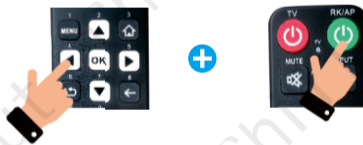

C Program remote to your SAT/Cable:

1. Press **▲** and RK/AP **⏻** together for 2 seconds, the RK/AP green light will flash 3 times.
2. Press **OK** and RK/AP **⏻** together for 3 seconds, the green light will be lit, then input the 3-digit code corresponding to your device brand from the SAT/CABLE code table. (please refer to the code list)



- !** When the remote control is in SAT/Cable mode, the [volume], [MUTE], and [TV POWER] buttons still control the TV. You can also switch the volume as needed. Refer to the manual part VII [Dual device volume control buttons]